

VICTROLA™



MODEL: VPRO-2000

PROFESSIONAL TURNTABLE

Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY
BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS	3
PRODUCT OVERVIEW	5
SETUP / BASIC OPERATION.....	7
LISTENING TO A VINYL RECORD	8
LISTENING TO MUSIC VIA RCA LINE OUT.....	10
LISTENING TO MUSIC VIA BLUETOOTH OUT	10
USING THE ANTI-SKATE / PITCH CONTROL / STROBOSCOPE	11
USB RECORDING OPERATION.....	12
SPECIFICATIONS.....	12
TROUBLESHOOTING	13
FCC STATEMENT	14
CALIFORNIA PROP 65 WARNING	15
WARRANTY.....	15



CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.



14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

-Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

-The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.


16.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. **WARNING**
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
19. The use of the equipment in moderate climate.
20. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.
21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. The symbol  with Indication AC voltage.
23. The symbol with  indicate DC voltage.
24. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

ACCESSORIES INCLUDED:

- INSTRUCTION MANUAL WITH WARRANTY (BACK OF MANUAL)
- 45 RPM ADAPTER
- SOFTWARE CD (FOR MAC & PC)
- RCA CABLE
- USB CABLE (FOR RECORDING)
- COUNTER WEIGHT
- SLIP MAT
- QUICKSTART GUIDE
- ACRYLIC DUST COVER

PRODUCT OVERVIEW


Front View:

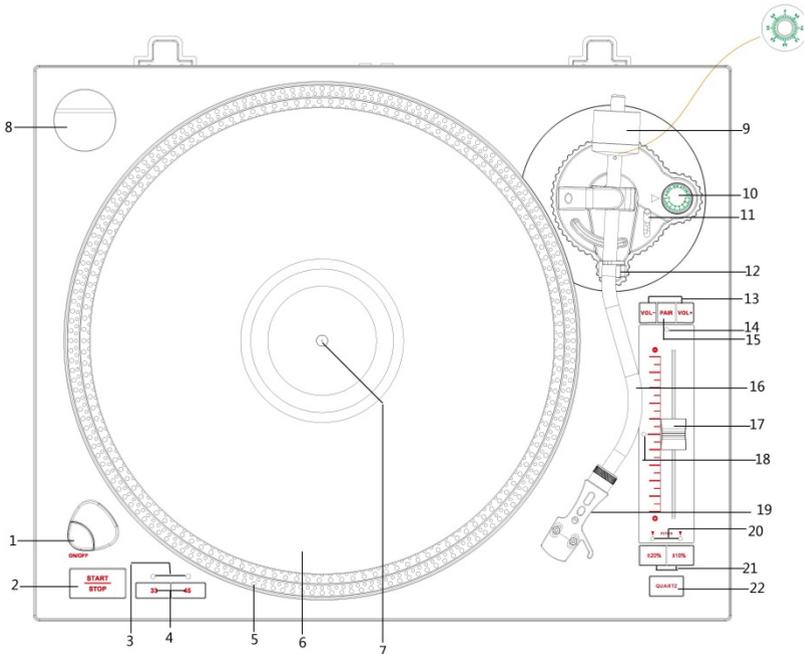

1. **ON/OFF:** Press to turn the unit on or off.
2. **START/STOP:** Engages and disengages the belt drive in the turntable.
3. **SPEED INDICATOR**
4. **TURNTABLE SPEED BUTTON:** Select 33 or 45 RPM turntable speed.
(NOTE: 78 RPM is selected by pressing both 33 and 45 buttons simultaneously, both speed indicator will light up.)
5. **STROBE DOTS (On Turntable Edge):** Operate in conjunction with stroboscopic light located under the ON/OFF to provide visual indication of accurate turntable speeds.
6. **TURNTABLE**
7. **SPINDLE**
8. **45-RPM ADAPTER**
9. **BALANCE WEIGHT:** Balances the tone arm and provides adjustment for proper downward tracking force on the stylus.
10. **ANTI-SKATE CONTROL:** Applies a small outward force to the tone arm, counteracting the tendency of the tone arm to move inward toward the center of the record.

11. **CUEING LEVER**
12. **TONE ARM REST HOLDER**
13. **VOL-/VOL+:** When streaming via Bluetooth, press to adjust the sound level.
14. **BLUETOOTH INDICATOR**
15. **PAIR:** In Bluetooth mode, press to connect the your Bluetooth amplifier device.
Press and hold to disconnect from your Bluetooth amplifier device.
16. **TONE ARM**
17. **PITCH ADJUST SLIDER:** Use in conjunction with Quartz Lock Button to adjust the turntable's rotational speed. When it is centered the quartz lock is active.
18. **QUARTZ LOCK LED INDICATOR**
19. **CARTRIDGE COVER**
20. **PITCH LED INDICATORS**
21. **PITCH SPEED RANGE:** Select +/- 10% or +/- 20% speed range.
22. **QUARTZ LOCK BUTTON:** Press to turn the pitch control on and off.


Rear View:

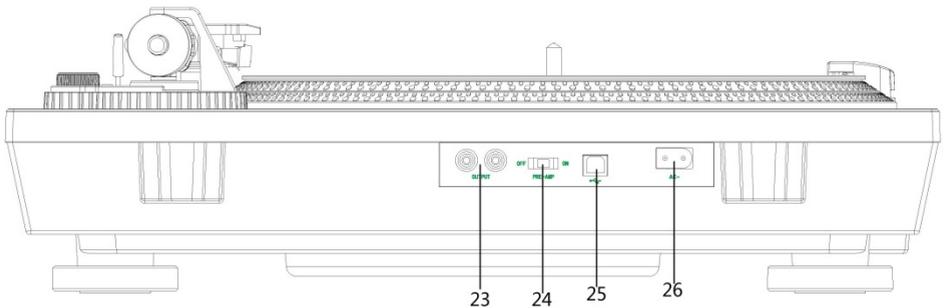

23. **OUTPUT JACKS:** Used for connecting the RCA line out cable to an external speaker device.
24. **PRE-AMP ON/OFF:** Allows the internal stereo phono pre-amp to be bypassed when the turntable is used with equipment that has magnetic phono inputs.
25. **USB JACK:** Used for recording Vinyl to a computer (Mac and PC software is included).
26. **AC POWER CORD:** Connect the AC plugs into a wall outlet. It is strongly recommended that this product should be operated only from the type of power source indicated on the rating label.


SETUP / BASIC OPERATION

1. Remove any packaging materials from the unit.
2. Connect the AC power cord to a wall outlet.
3. Press the ON/OFF button to turn the unit on.

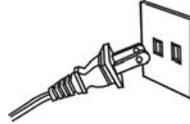


Installing the Platter Before Use:

1. Take all the components from the package and make sure to place the unit on a clear stable surface.
2. The belt is preinstalled on the bottom of the metal platter. Make sure the belt is NOT twisted when installed. Use your thumb to stretch the belt to the small access hole as shown in the illustration below.

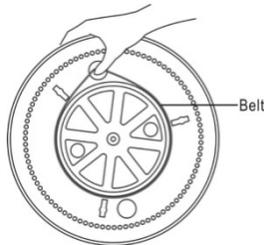


3. Carefully turn the platter over while continuing to hold the belt through the access hole. While keeping the belt on the platter, line up the spindle hole to the center pin located in the unit and place the platter onto the unit.
4. Through the access hole, surround the belt onto the gold colored main rotation column located in the top left area under the platter. The belt will create a triangular line from the column to the platter.

Note: Make sure the belt has not fallen off of the platter after it has been placed on to the main rotation column.

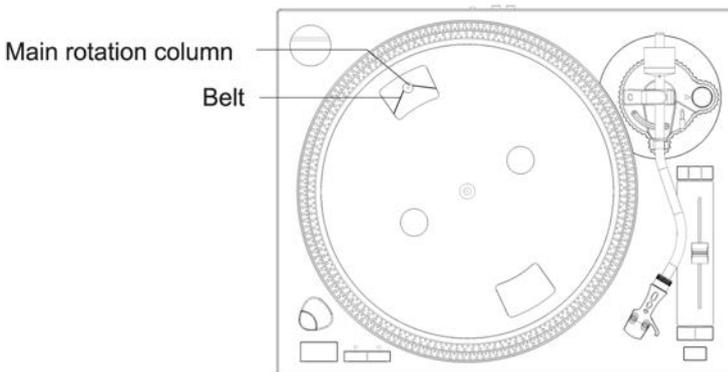

- Place the turntable slip mat on the platter.
- Remove the counterweight and place it on the back of the Tone arm.
See Illustration to the right – See Instructions below for proper installment.
- Remove the 45 RPM adapter from the packaging and place it in the top right corner of the record player.

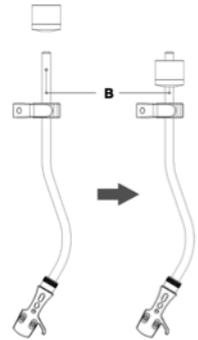

Note: To disassemble the turntable, simply unwrap the belt from the main rotation column. Then directly grasp the platter and carefully pull it upward.

Note: Before using make sure to remove all safety ties and the Needle Guard.

Note: Before using the Record, make sure to properly set the Counter Weight, see Setting the Counter Weight Section below.

LISTENING TO A VINYL RECORD


MUST READ!!!

*****The Counter Weight on the tone arm MUST be properly set-up before first use!**

Setting the Counter Weight



- Identify the silver counter weight at the back of the tone arm.
- With your hand, lift the tone arm up and move the tone arm away from the tone arm rest but not over the black record platter (see photo A). Be careful that the needle does not hit anything. Rotate the silver counter weight (clockwise OR counter-clockwise) until the tone arm floats naturally.
Note: the black number ring will also rotate as you turn the silver counter weight.
- With the tone arm floating and the stylus protector removed, the goal is to create a state of equilibrium in the arm by rotating the counter weight so that the tone arm is perfectly balanced with the counter weight (see photos B and C).

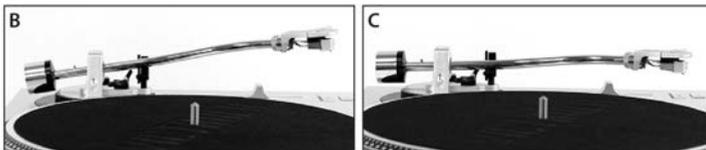

Uneven Tone Arm

Balanced Tone Arm

- Now that the tone arm is resting in a level / balanced position, you must set the proper weight for the needle on this tone arm. Identify the black number ring attached to the counter weight.
- Carefully rotate only the black number ring so that "0" is at the 12 o'clock position. Be sure to hold the silver rear portion of the counterweight to prohibit its movement. **DO NOT let the silver counter weight turn, the black number dial will turn separately.**

- Finally, from this “0” reference position, grasp BOTH parts of the counter weight and black number ring and rotate the weight counter-clockwise so that the “2.5” marking on the dial is in the 12 o’clock position. *This will set the tone arm to 2.5 grams of downward force, the recommended tracking weight for this needle (cartridge).*

Note: *The counter weight adjusts the pressure of the needle. If the pressure is too much, the sound will become distorted. If the pressure is too little, track skipping will happen more frequently. At this point, turning the balance weight very slightly clockwise or counter-clockwise can make any fine-tuning adjustments.*

Listening to a Vinyl Record

- Make sure the Counter Weight is Set properly before playing a record.
- Place a vinyl record on the turntable. When playing a 45 RPM record, use the included adaptor.
- Select the appropriate speed by pressing either the 33 or 45 button; the corresponding LED indicator will light up.
Note: *To set the turntable speed for 78 RPM, press the 33 and 45 RPM buttons simultaneously.*
- Remove the tone arm rest holder to release the tone arm.
Note: *Make sure to remove the White plastic needle guard.*
- Move the tone arm gently to the edge of the record (or the starting point of a track). Then press the START/STOP button to start playing.
- At the end of the record, the turntable will not stop rotating unless you press the START/STOP button again. Lift and return the tone arm to the tone arm rest manually. Lock the tone arm rest holder to protect the tone arm.
Note: *After approximately 20 minutes, if you do not press the START/STOP button, the turntable will stop rotating automatically.*

Important:

- Closing the top cover will help prevent dust from settling on the turntable.
- Always relock the tone arm clip before transporting the unit.
- Do not place anything on top of the turntable cover, especially while playing a record.

How to Replace the Turntable Stylus (Replacement Needle # ITNP-LD1)


Please note: The stylus should last about 300 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality. 78 RPM records may accelerate stylus wear and may have to be changed sooner.

Removing the Stylus from the Cartridge

- Set a screwdriver at the tip of the stylus and carefully push down to the direction “A”.
- WARNING:** When applying force to stylus, too much may damage or break the stylus.
- Pull the stylus out toward the direction “B”.

Installing the Stylus

- Hold the tip of the stylus and insert the other edge by pressing toward direction “C”.
- Push the stylus up toward direction “D” until it locks at the tip.

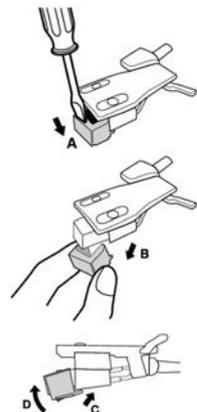

Caution:

- Do not remove/bend the stylus needle and do not touch the needle to avoid injury.
- Turn off the unit's power before you replace the stylus and keep out of reach of children.

LISTENING TO MUSIC VIA RCA LINE OUT

1. Connect one end of the RCA line out cable to either the AUX-IN, LINE IN or PHONO IN sockets on your external speaker device. Connect the other end to the OUTPUT socket on the back of the unit.
2. If you are connecting via PHONO IN from your external speaker system, the PRE-AMP switch should be turned OFF.
3. If you are connecting via AUX-IN or LINE IN from your external speaker system, the PRE-AMP switch should be turned ON. Improper setting of PRE-AMP switch may lead to no sound or loud unwanted feedback.

Note: *Be sure to connect the white plug to the white jack and the red plug to the red jack.*

CONDENSATION WARNING:

When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it to stabilize at the temperature of its surroundings.

LISTENING TO MUSIC VIA BLUETOOTH OUT

1. Turn ON the unit and turn ON your external Bluetooth device.
2. Press the PAIR button to connect to your external Bluetooth device.
3. The Bluetooth LED Indicator will begin flashing, indicating the unit is searching for an external device.
4. The turntable will then auto pair with your external Bluetooth device. The LED will remain lit and an audible chime will ring indication a successful connection.
5. You can adjust the sound level on your external Bluetooth device or press the VOL- or VOL+ button on the turntable.
6. Press and hold the PAIR button to disconnect from your external Bluetooth device, LED indicator will turn OFF.

Note: *If the turntable does not pair with the external Bluetooth device, turn OFF both the turntable and the device and reattempt the procedure above.*

USING THE ANTI-SKATE / PITCH CONTROL / STROBOSCOPE

Using the Anti-Skate Dial

Before using the turntable, make sure the anti-skating dial is set to "0".

The anti-skating function helps compensate inward tracking force that occurs with certain records when the stylus (needle) nears the center or end of the record.

If the turntable is experiencing excessive skipping while nearing the center pin, follow these steps to reduce any skating.

1. Simply increase the anti-skating function in small increments indicated on the dial.
2. Start by moving the dial from 0 to 1, then test its performance.
3. If there is still skipping or poor performance, simply increase the dial to the number that allows the highest quality of playback.

Note: *While adjusting the anti-skating knob, leave the tone arm and balance weight alone to prevent damaging the stylus.*

Using the Pitch Control

1. The Quartz button is used to turn the pitch control function ON and OFF.
2. Press the desired Pitch Range Button (+/-10% or +/-20%) to vary the turntable's rotational speed by as much as +/- 20%, and the QUARTZ indicator will light up red.
3. Use the Pitch Adjustment Slide to find the desired pitch control.
4. When the Quartz is in the center position, the speed rate is at 0% pitch, and the QUARTZ LED indicator will light up green.

Note: *Once the pitch function is OFF, the Quartz LED Indicator will remain lit Green, even if the Pitch Adjustment Slide is moved.*

Using the Stroboscope

The stroboscope light is a reference that the turntable is rotating at the desired speed (33-1/3 or 45 RPM). If the turntable is spinning at the exact desired speed it will appear to be "standing still" or stationary.

1. Observe the flashing light from the stroboscope; it will remain lit when the unit is turned ON.
2. In order to make the flashing light appear stationary, you need to move the Pitch Adjustment Slide.
3. If the flashing light is flowing clockwise, it means that the turntable is turning a little faster.
 - Turn the Pitch Adjust Slide Control towards "-" position until the flashing light stands still.
4. If the flashing light is flowing counter-clockwise, it means the turntable is turning a little slower.
 - Turn the Pitch Adjust Slide Control towards "+" position until the flashing light stands still.

USB RECORDING OPERATION

To properly record your vinyl to MP3 via computer, use the included USB Output Cable and Instructional CD Software. Connect one end of the USB cable to the turntable and the other end into your computer. Then connect the AC power cord to the turntable. To install and use the software on your computer, select the proper Mac or PC install files, then follow the prompts provided on the Instructional CD.

For the most up to date manuals, software, instructional details, troubleshooting or other downloadable content, please go to <http://audacityteam.org>.

SPECIFICATIONS

GENERAL

Power Requirements.....	AC 120 V ~ 60 Hz
Power Consumption.....	6 W
Dimensions (W x H x D)	17.7in x 5.9in x 14.7in (approx.) 450mm x 150mm x 375mm (approx.)
Weight.....	17 lbs (approx.) 7.7 kgs (approx.)

RECORD PLAYER

Motor.....	DC servo motor
Drive System.....	Belt Drive
Speeds.....	33-1/3 RPM, 45 RPM, 78 RPM
Wow Flutter.....	Less than 0.25% (WTD)
S/N Ratio.....	55 dB
Cartridge Type.....	Moving Magnetic Cartridge
Stylus.....	ITNP-LD1
RCA OUT.....	200-280 mV (5 cm/sec at 1 KHz-10dB)
Phono out.....	3-4mv (5 cm/sec at 1 KHz-10dB)

BLUETOOTH TRANSMIT

Bluetooth Version.....	Bluetooth V4.2
Bluetooth Profiles.....	A2DP, AVRCP
Bluetooth Frequency range.....	2.402GHz-2.480GHz
Operating Distance.....	7 meters (30 ft.)

USB

Type.....	USB series B connector
Full-Speed.....	USB 2.0 full speed

TROUBLESHOOTING

In case of trouble with the unit, please look at the chart below. If the issue is not listed below, please contact customer service or the supplier for more assistance.

	Symptom	Possible Cause	Solution
GENERAL	- Power does not come on when the power switch is pressed.	- Unit is unplugged.	- Connect the unit to the AC power supply.
	- No sound from the speakers.	- The volume is turned down to MIN; The working input does not match the source input.	- Adjust the volume; Reselect an input source.
	- The sound is noisy.	- The unit is too close to a TV set or another similar appliance.	- Turn off the TV or other appliance, and re-locate the unit.
	- The unit has no response or could not reset.	- External factors such as ESD (Electro-static discharge) affect the unit.	- Remove the power cord and all power supply devices, then re-plug in the unit after one minute.
RECORD PLAYER	- The sound is noisy when playing the record.	- The stylus is not weighted properly.	- Rebalance the stylus using the counter weight.
	- The sound is noisy when used for a period of time.	- The stylus is damaged.	- Please change a new stylus.
BLUETOOTH	- No sound.	- The unit is not paired. - Your device's and/or the unit's volume is not turned up. - Your device is too far from the unit or there're some obstacle between your device and the unit.	- Ensure the unit is connected. - Move your Bluetooth device closer to unit. - Turn up the volume on your portable device and/or the unit. - Turn OFF your Bluetooth device and unit. Then power them both back ON.
	- Sound has a lot of static.	- Your device is too far away.	- Bring your device closer to the Turntable.
	- Unable to pair with a Bluetooth device.	- Your device doesn't have Bluetooth connectivity. - The Bluetooth pairing is not successful.	- Confirm that your device is Bluetooth compatible. - Re-pair the unit and device again.

For further assistance with your product, call Innovative Technology at
TOLL FREE# 1-877-ITECH-97 (1-877-483-2497).

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

CALIFORNIA PROP 65 WARNING



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARRANTY

Innovative Technology Electronics LLC.
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement.

Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number. All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address. Please include your check or money order in the amount of

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99 (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC.
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE

REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.