

## Warranty

Your W10 Receiver Amplifier is covered by a limited one-year warranty.

When requesting service under warranty conditions send amplifier along with original proof-of-purchase to:

Walker Equipment Corporation  
4009 Cloud Springs Road  
Finggold, GA 30736  
(706) 861-2212

Out of warranty repairs may also be made by Walker Equipment Corporation. To obtain repairs, first Call 1-800-HANDESET (or 706-861-2212) for repair charges. Securely pack the equipment and send it prepaid with a check or money order to Walker Equipment. Your repaired equipment will be returned to you C.O.D. freight collect.

## FCC Registration Information

In compliance with FCC Regulations, Part 68, you are advised that:

- Upon request of your telephone utility, you must notify your telco of intention to install an FCC Part 68 Registered device, the FCC Registration Number, (located on the underside of your W10 unit) the Pinger Equivalence Number, and when the device is disconnected from telco network.
- This amplifier is designed for long service and dependable operation. If any problem with your telephone service occurs, disconnect the W10 unit. If the trouble still exists, notify your telephone company. If such disconnection ends the problem, the W10 may be the source of the trouble and should be repaired before reconnecting. FCC regulations require that the repair of customer-owned telephones must be performed by the manufacturer of such equipment.
- Your telephone company has the right to make changes in its facilities, equipment, operation or procedures that could affect the proper functioning of your telephone equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted service.

- If your equipment causes harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the situation and you will be informed of your right to file a complaint with the FCC.

- **DO NOT CONNECT DIRECTLY TO A TELECOMMUNICATION NETWORK.**

For more information, call:  
**1-800-HANDESET**  
**(1-800-426-3738)**  
In USA and Canada

Part No.  
7010.130  
Rev. 4

 
**WALKER**  
**EQUIPMENT**  
A Division of Plantronics, Inc.

**W10**  
Receiver Amplifier

USERS  
GUIDE




## Installation

- Remove the handset modular cord from the telephone base and insert into the W10 modular port. (See A)
- Insert the W10 modular connector into the telephone base (See B)
- Insert one end of the provided short cord into the W10 modular connector labeled "TELEPHONE."
- The W10 may be secured to your desk or phone with the attachment kit provided.

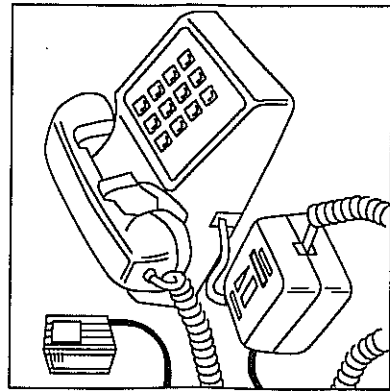

## Connecting the Power Supply

   - Insert the power supply connector into the W10 power supply part. (See C)
- Plug the power supply into a convenient wall power outlet.
- Use only the power supply provided with your W10.

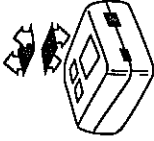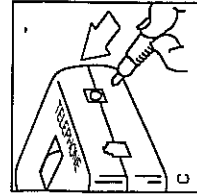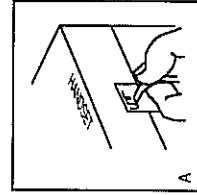

Attachment Kit

## Adjusting the Volume

- To adjust the volume, hold the handset receiver close to your ear and rotate the W10 volume control knob located on top of the amplifier case. (See D)
- To increase the volume, rotate the control knob away from you, toward the rear of the amplifier case.
- To decrease the volume, rotate the knob in the opposite direction.
- The volume control should normally be kept at the lowest comfortable setting to avoid excessive line noise.
- Users with normal hearing should use a volume setting of "2" or "3" in low noise level environments.